


EXPOLITE

Tour-PAR QXW

led51155

DMX-Channels

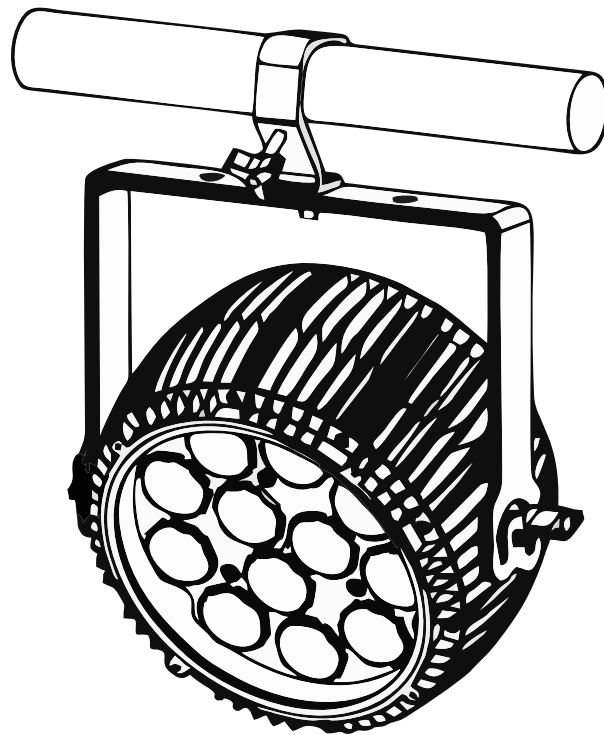

DMX-Modi: 3

Channels: 5 / 7 / 11

DMX-Chart V201705-001

Änderungen sind ohne Ankündigung möglich.
Changes are possible without prior notice.

5CH	Value	Function
CH1	0-255	R
CH2	0-255	G
CH3	0-255	B
CH4	0-255	W
CH5	0-255	ZOOM

7CH	Value	Function
CH1	0-255	Master intensity
CH2	0-255	R
CH3	0-255	G
CH4	0-255	B
CH5	0-255	W
CH6	0-255	ZOOM
CH7	0-5	No strobe
	6-20	Not synchronous strobe(slow to fast)
	21-60	Synchronous strobe(slow to fast)
	61-100	Electronic Sine wave(slow to fast)
	101-140	Random Strobe(slow to fast)
	141-180	Opening pulse(slow to fast)
	181-220	Closing pulse(slow to fast)
	221-255	Electronic Square wave(slow to fast)

11CH	Value	Function
CH1	0-255	Master intensity
CH2	0-255	R
CH3	0-255	G
CH4	0-255	B
CH5	0-255	W
CH6	0-255	ZOOM
CH7	0-5	No strobe
	6-20	Not synchronous strobe(slow to fast)
	21-60	Synchronous strobe(slow to fast)
	61-100	Electronic Sine wave(slow to fast)
	101-140	Random Strobe(slow to fast)
	141-180	Opening pulse(slow to fast)
	181-220	Closing pulse(slow to fast)
	221-255	Electronic Square wave(slow to fast)

CH8(CH8 Prior to CH10)	0-5	No effect
	6-10	CT01(Call custom color in menu setting)
	11-15	CT02
	16-20	CT03
	21-25	CT04
	26-30	CT05
	31-35	CT06
	36-40	CT07
	41-45	CT08
	46-50	CT09
	51-55	CT10
	56-60	AUTO 1(R,G,B,RG,RB,GB)
	61-65	AUTO 2(R ↑ ,R ↓ ,G ↑ ,G ↓ ,B ↑ ,B ↓ ,W ↑ ,W ↓)
	66-70	AUTO 3(R ↑ G ↑ ,R ↓ G ↓ ,R ↑ B ↑ ,R ↓ B ↓ ,B ↑ G ↑ ,B ↓ G ↓)
	71-75	AUTO 4 (R ↑ G ↑ B ↑ W ↑ ,R ↓ G ↓ B ↓ W ↓)
	76-80	AUTO 5 (Rainbow effect: B,BG ↑ ,BG,B ↓ G,G,GR ↑ ,GR,G ↓ R,R,RB ↑ ,RB,R ↓ B)
	81-220	Reserved
	221-225	CHASE1
	226-230	CHASE2
	231-235	CHASE3
236-255	Reserved	
CH9	0-255	Auto speed(fast->slow)
CH10		Virtual color wheel
	0-10	No effect
	11	Blue (Blue=full, Red+Green+White=0)(step)
	12-50	Red=0, Green->up,Blue =full, White=0(proportional)
	51	Light Blue (Red=0, Green=full, Blue =full, White=0)(step)
	52-90	Red=0, Green=full, Blue->down, White=0(proportional)
	91	Green (Red=0, Green=full, Blue =0, White=0)(step)
	92-130	Red->up, Green=full, Blue=0, White=0(proportional)
	131	Yellow (Red=full, Green=full, Blue=0, White=0)(step)
	132-170	Red=full, Green->down, Blue=0, White=0(proportional)
	171	Red(Red=full, Green=0, Blue=0, White=0)(step)
	172-210	Red=full, Green=0, Blue->up, White=0(proportional)
	211	Magenta (Red=full, Green=0, Blue=full, White=0)(step)
	212-250	Red -> down, Green=0, Blue=full, White=0(proportional)
	251-255	Blue (Red=0, Green=0, Blue=full, White=0)(step)

CH11	0-10	Use the dimmer mode which menu had set up
	11-20	Linear curve
	21-30	Square law curve
	31-40	Inverse square law curve
	41-50	S-curve
	51-60	Linear curve and smooth
	61-70	Square law curve and smooth
	71-80	Inverse square law curve and smooth
	81-90	S-curve and smooth
	91-254	Use the dimmer mode which menu had set up
	255	Reset fixture(at least 5S)